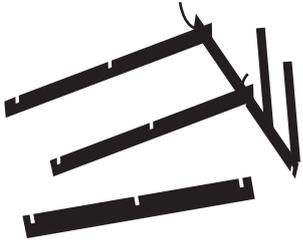
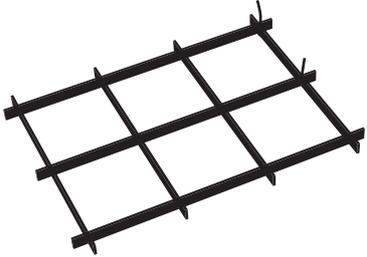
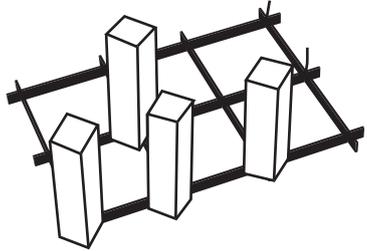
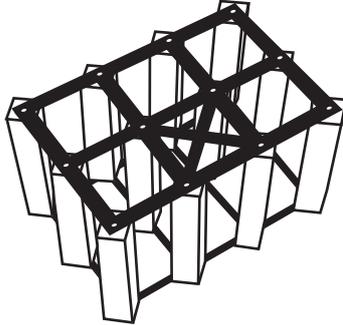
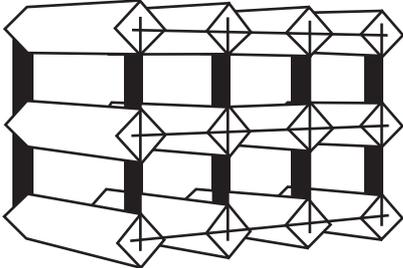


ASSEMBLY INSTRUCTIONS: (Assemble with a hammer on a hard surface.)

		
<p>1. HOLD ONE LENGTH SLOTS DOWN TIE OTHERS RIGHT ACROSS, SLOTS UP.</p>	<p>2. NOW DROP STRIPS ACROSS ALL THE SLOTS.</p>	<p>3. LOCATE AND TAP IN TIMBER. REMOVE TIES ON LAST ROW.</p>
		
<p>4. SQUARE CORNERS, PLACE METAL FLAT AROUND EDGES, NAIL <u>CORNERS ONLY</u> DEAD CENTRE OF TIMBER.</p>	<p>5. PLACE REMAINING TWO STRIPS AND CROSS BRACE, SQUARE, NAIL ALL TIMBER CENTRES, TAP DOWN ALL OVER.</p>	

MANUFACTURED BY

**CLASSICO LIMITED, BOX 31, MARAETAI, AUCKLAND, NEW ZEALAND
TELEPHONE 0-9 - 274 0331 FACSIMILE 0-9-274 3620**